

Cutout printing instruction


To print actual size:

Adobe Acrobat Reader version 5.x user

1. From the menu bar, select File>Print
2. Under the "Copies and Adjustments" section, uncheck both "Shrink oversized pages to paper size" and "Expand small pages to paper size" boxes.
3. Click "Print".
4. Check measurements of printed template with dimensions on template.

Adobe Acrobat Reader version 6.x user

1. From the menu bar, select File>Print
2. Under the "Page Handling" section, set Page Scaling to None.
3. Click "Print".
4. Check measurements of printed template with dimensions on template.

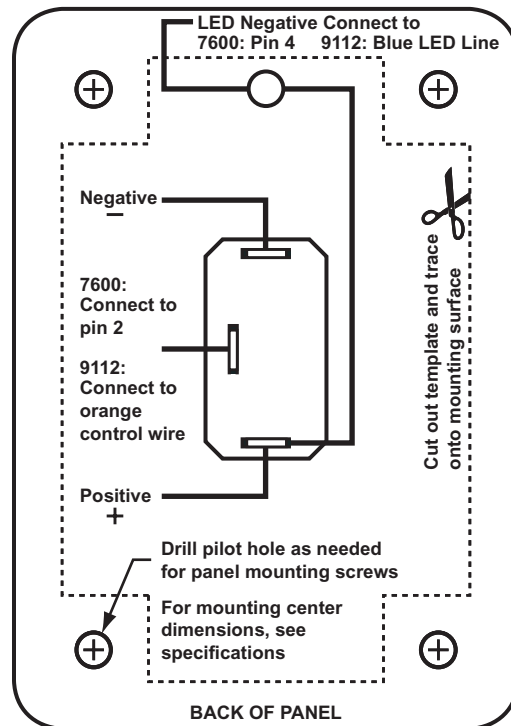

PN 8270
Back of Panel Cutout